


CA200 CONNECTOR CONVERSION AND CABLE CONNECTION FLOWCHART

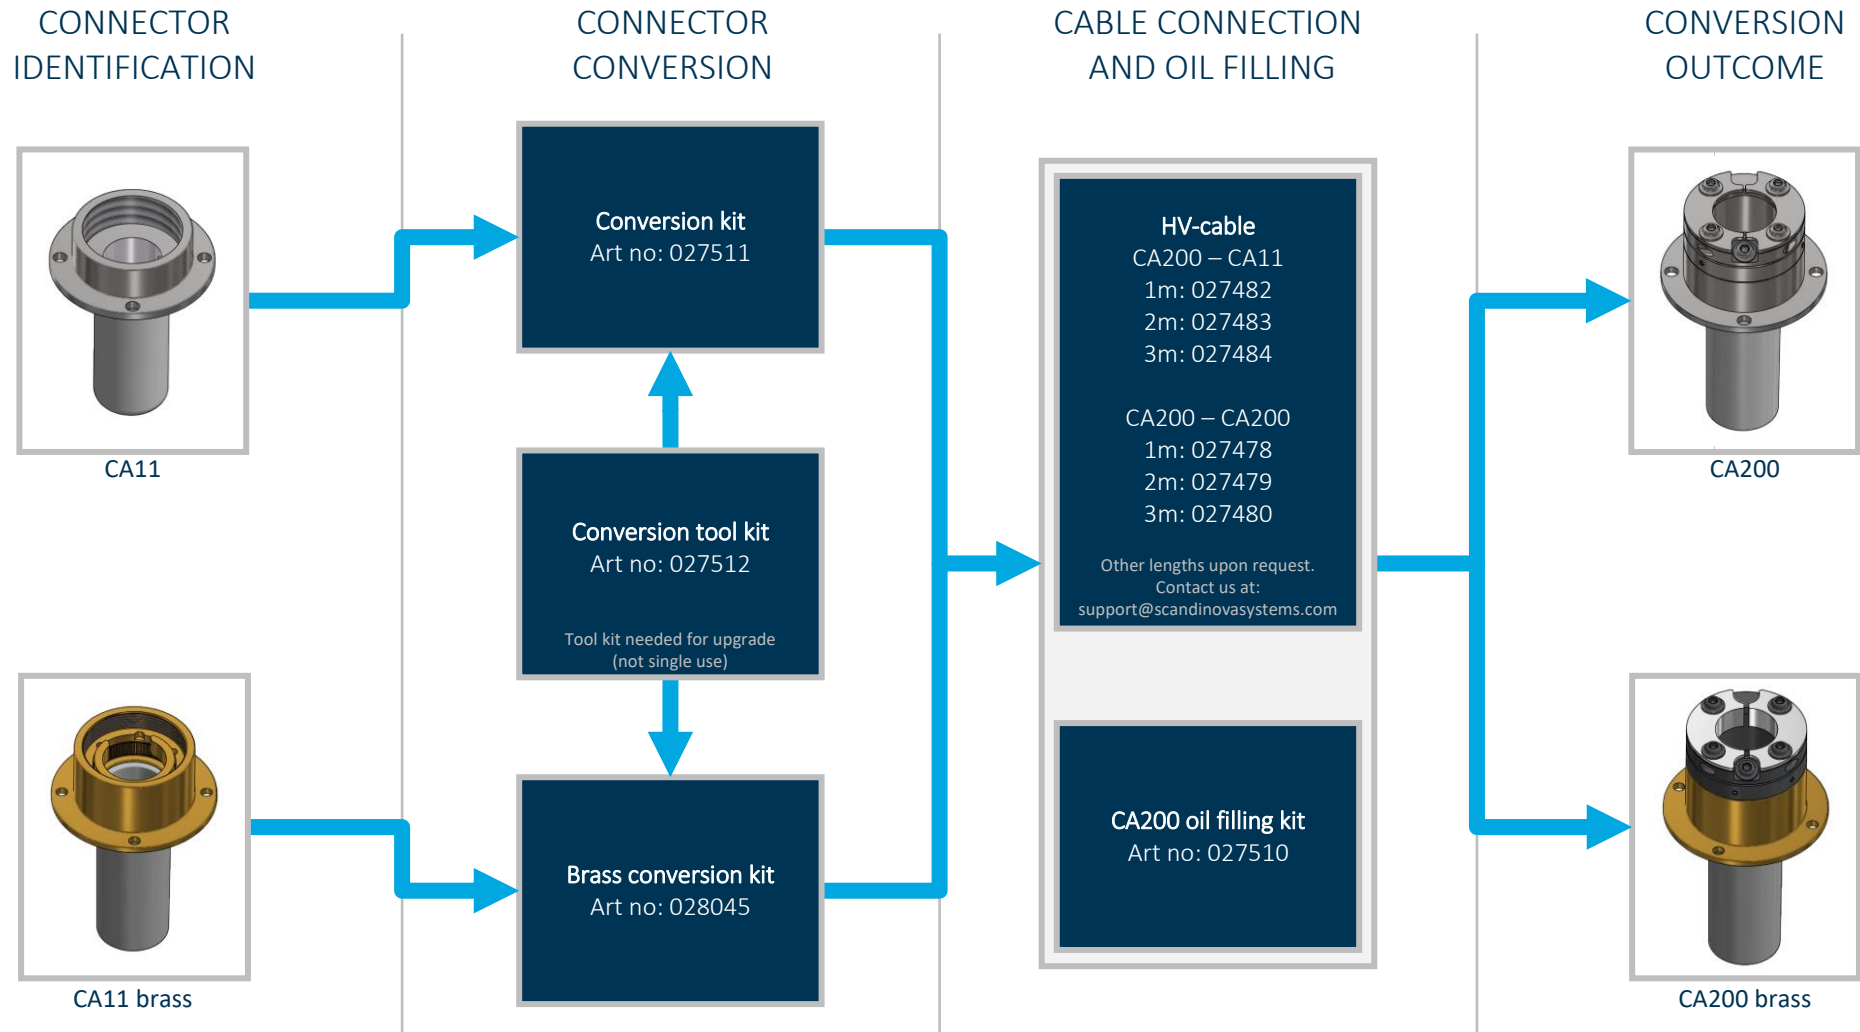

1. Identify which connector your modulator is equipped with
 - a) CA11, you will need converting kit 027511
 - b) CA11 brass, you will need converting kit 028045
2. If you do not already have a conversion tool, you will need the conversion tool kit 027512. Scan the QR-code to watch an instruction video of the conversion.



3. Identify which adaptor connections you need on the HV-cable.
 - a) CA200 – CA11, choose an appropriate length
 - b) CA200 – CA200, choose an appropriate length

If you already have a CA200 HV-cable in a desired length, you will only need the CA200 oil filling kit 027510. Scan the QR-code to watch an instruction video of the cable mounting and oil filling.