


CA200 CONNECTOR CONVERSION AND CABLE CONNECTION FLOWCHART

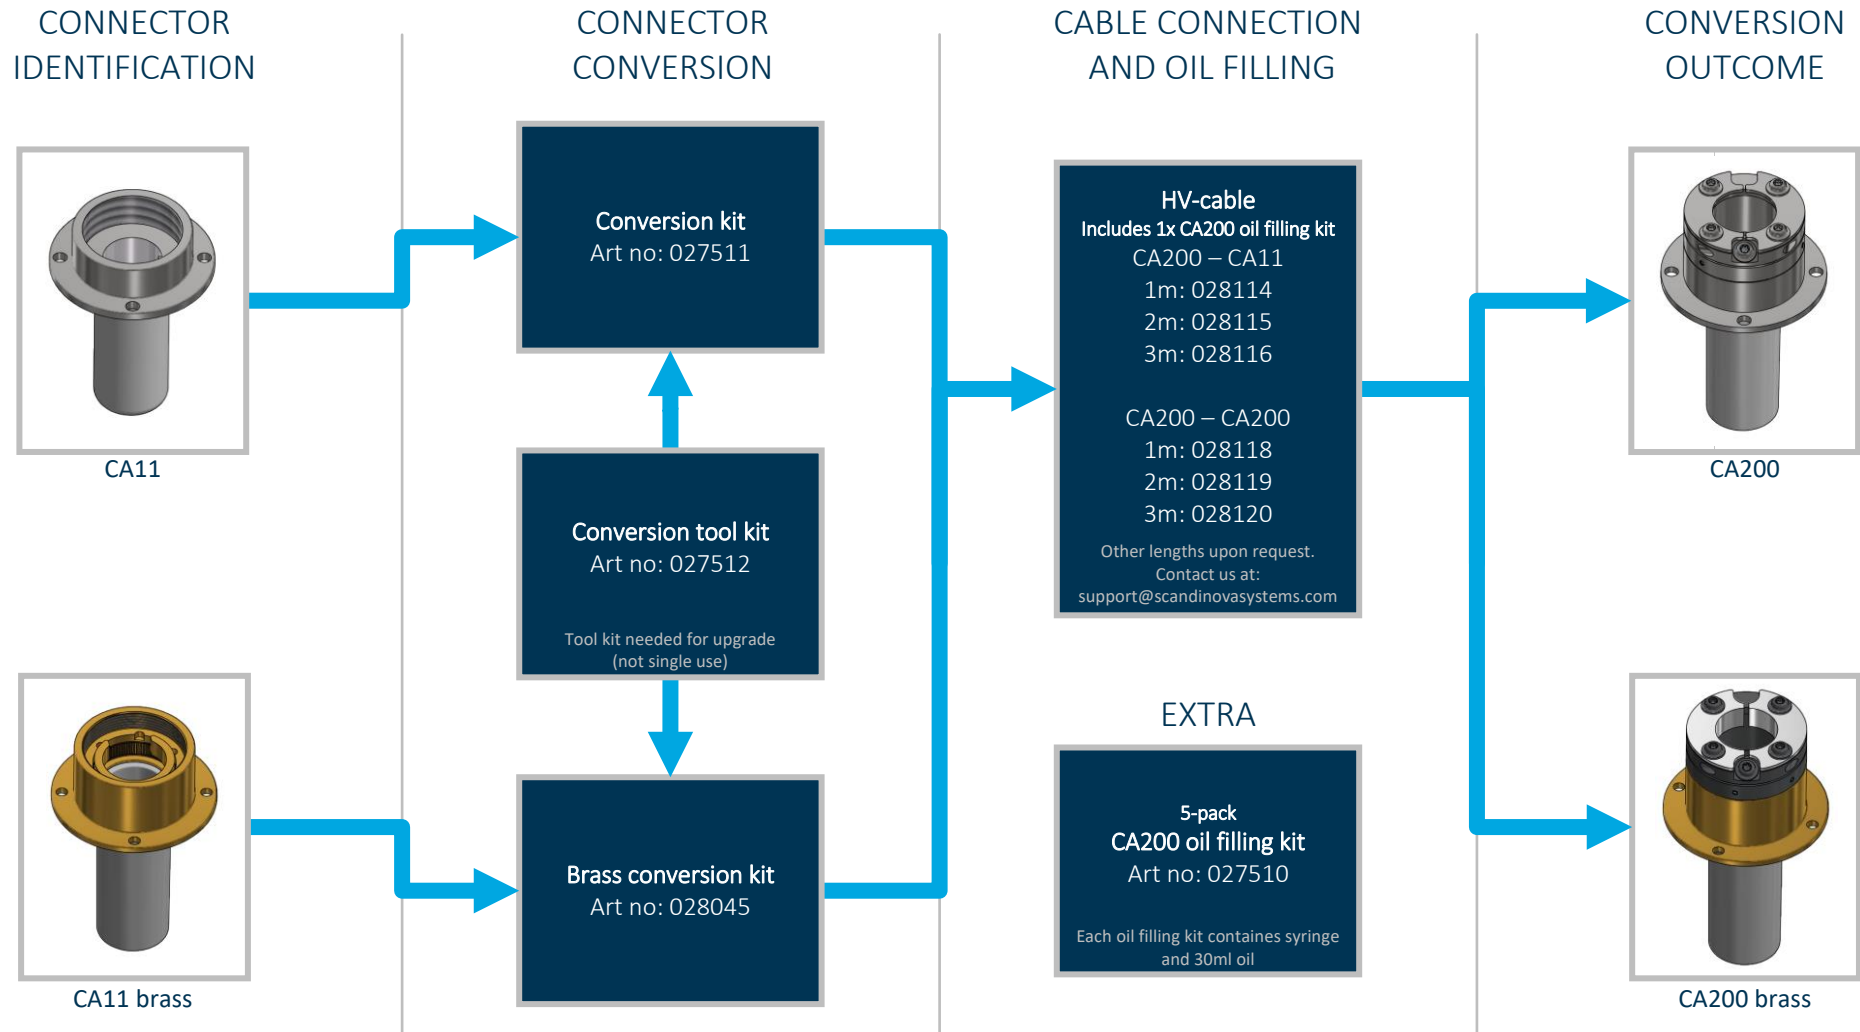

1. Identify which connector your modulator is equipped with
 - a) CA11, you will need conversion kit 027511
 - b) CA11 brass, you will need conversion kit 028045

2. If you do not already have a conversion tool, you will need the conversion tool kit 027512.

Scan the QR-code to watch an instruction video of the conversion.



3. Identify which connections you need on the HV-cable.
 - a) CA200 – CA11, choose an appropriate length
 - b) CA200 – CA200, choose an appropriate length

The amount of oil, included in the HV-cable kit, is enough for filling two connectors. If you want more syringes and oil, you will need the 5-pack CA200 oil filling kit 027510.

Scan the QR-code to watch an instruction video of the cable mounting and oil filling